ZOLL


User Manual

8 Ports 1000M Ethernet Switch BS8G

Packing list

- Ethernet Switch x 1
- Manual x 1
- Power Adapter x 1

■ Product description

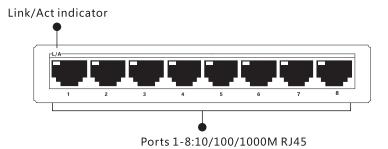



Indicator light	Status	Description
	ON	Port is connected
1~8	Flashing	Port is transmitting data
	OFF	The port is not connected, or the connection is abnormal
Davisar	ON	Normal
Power	OFF	Abnormal

Interface/ Description button		Description
	RJ45 Port	1-8: 10/100/1000M Auto-Negotiation RJ45

■ Specifications

Name	8 Ports 1000M Ethernet Switch			
Model	BS8G			
Interface	RJ45 Ports	1-8: 10/100/1000M Auto-Negotiation RJ45		
LED	Power , Link , Act			
Processing	Store-and-Forward			
Types	Half-duplex back pressure and IEEE802.3x full-drplex flow control			
	Bandwidth	16Gbps		
Performance Specification	Packet Forwarding Rate	11.904Mpps		
	MAC Address	4k		
	IEEE802.3i 10BASE-T			
Network	IEEE802.3u 100BASE-TX			
Standards	IEEE802.3x Flow Control			
	IEEE802.3az EEE			
Power Input	AC 100-240V 50/60Hz			
Size	140mm(L)*67.5mm(w)*26mm(H)			
Cables	UTP category 5 or above cable			
Environmental	Working Temperature: 0℃-45℃, Humidity: 10%-90%non-condensing			
Specification	Storage Temperature: 20°C-70°C, Humidity: 5%-95%non-condensing			

■ Installation Notes

To install the switch, please follow the steps:

- (1) This switch is only used indoor please place it in ventilated and dry space.
- (2) Please avoid placing the switch on an unsteady desk.
- (3) Please insert the power adapter carefully to the power Socket of the switch, and then connect it properly to a power source through the cable of the switch.
- (4) Ensure adequate ventilation space(≥10cm) around the switch for dissipating heat and air.
- (5) Please avoid any heavy thing placed on the switch.
- (6) Please use the attached power adapter.

■ Connecting the Unit

- (1) Please respectively connect two ends of the cable to the switch port and computer or other network devices.
- (2) Please separately link the ends of the included power supply configuration to power jack and socket.
- (3) The Power indicator will light all the time

Warranty Card

Model NO.	
Serial NO	
Date of Purchase	
RMA Number	
Retum Reason	
Customer Name	
Customer Address	
Email	

Note: Please refer to the User Manual for Detail Warranty policy.