 



**HIGH POWER LOUDSPEAKER**

# User Manual


**Model: DC-811**

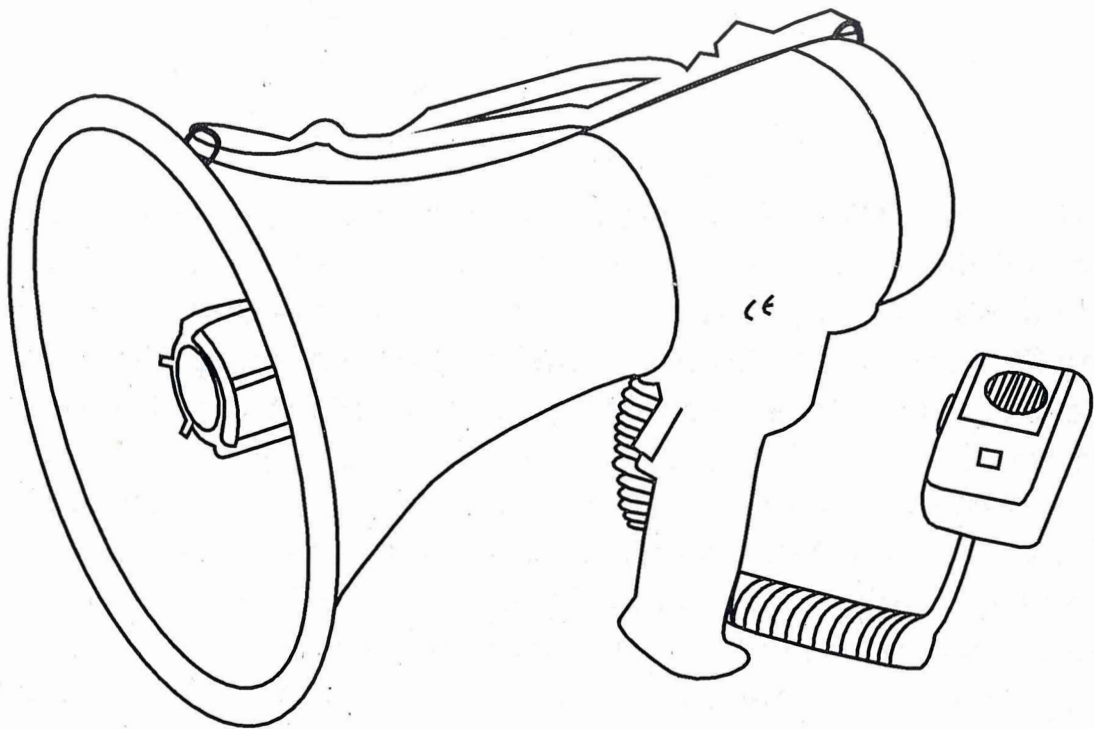
 
## Structural description :

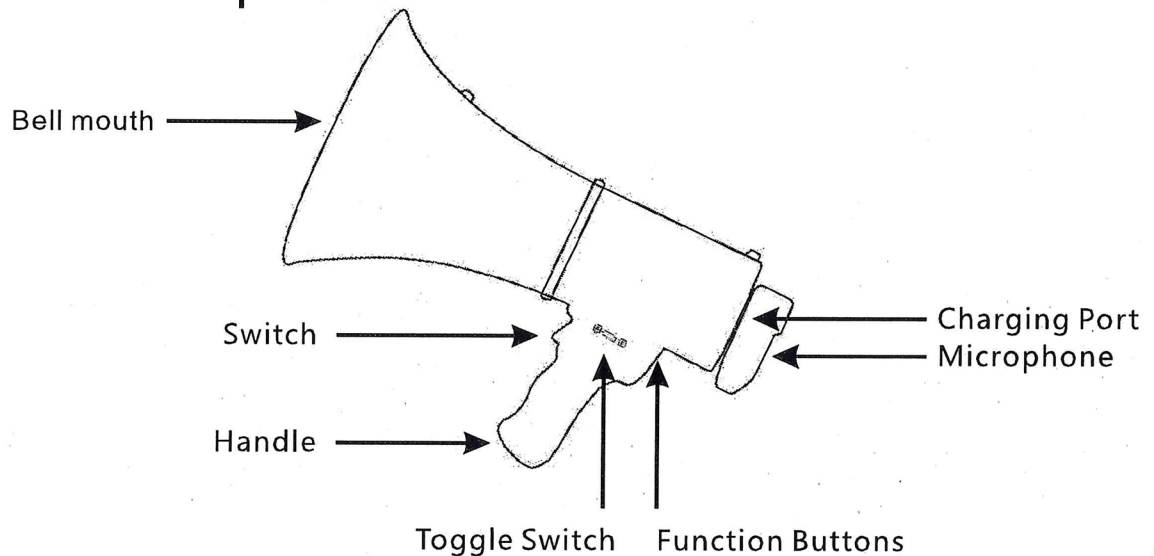

## Operating instructions:

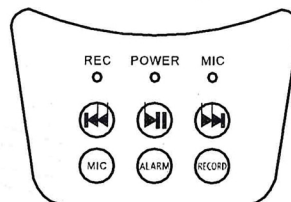


1. Turn the switch on, "POWER" lights up, and the microphone can start speaking.
2. Automatically detect whether a USB drive is inserted. If a USB drive is detected, play a USB song and manually press and hold "MIC" for 3 seconds to turn on the microphone.
3. Connect the Bluetooth "811 Megaphone" and start playing Bluetooth. If Bluetooth plays, stop playing USB flash drive; Resume USB drive playback after Bluetooth is turned off.
4. Long press and hold "MIC" for 3 seconds, the "MIC" light remains on, the microphone can speak, and Bluetooth and USB flash drive playback are stopped; Press and hold the "MIC" button for another 3 seconds to stop the microphone from speaking, turn off the "MIC" indicator light, and resume Bluetooth or USB playback.
5. When playing external music, plug in the external audio source through the 3.5 interface and start playing the external audio source. At the same time, the "MIC" light flashes every 2 seconds. If there are other audio sources such as microphones, Bluetooth, USB flash drives, during recording operation, the external audio source stops playing; Resume playback until other operations are completed.
6. Press and hold the "RECORD" button for 3 seconds to start recording, while the "REC" indicator light remains on; Press and hold the "RECORD" button again for 3 seconds to stop recording and cycle in sequence; Recording only for microphone speech recording.
7. Press the "ALARM" button to play the recording file, while the "REC" indicator light flashes slowly every 2 seconds. Other playback stops and the recording file is played in a loop until the "ALARM" button is pressed again to stop playing the recording file and resume other playback, such as Bluetooth/USB playback; Simultaneous microphone speaking and recording playback.
8. Long press and hold the "ALARM" button for 3 seconds to play a solidified alarm sound, and at the same time, the "REC" indicator light flashes quickly every 0.5 seconds. Other playback stops, and the playback of the recording file is a loop playback until the "ALARM" button is pressed and held again for 3 seconds to stop playing the recording file and resume other playback, such as Bluetooth/USB playback; Simultaneous microphone speaking and recording playback.



# HIGH POWER LOUDSPEAKER

9. "⏮" Long press to increase volume, tap to play a song on Bluetooth/USB drive
10. "⏭" Long press to decrease the volume, tap to play the next song on Bluetooth/USB drive
11. "⏮" Play/pause buttons for USB drive and Bluetooth

## Rear panel:

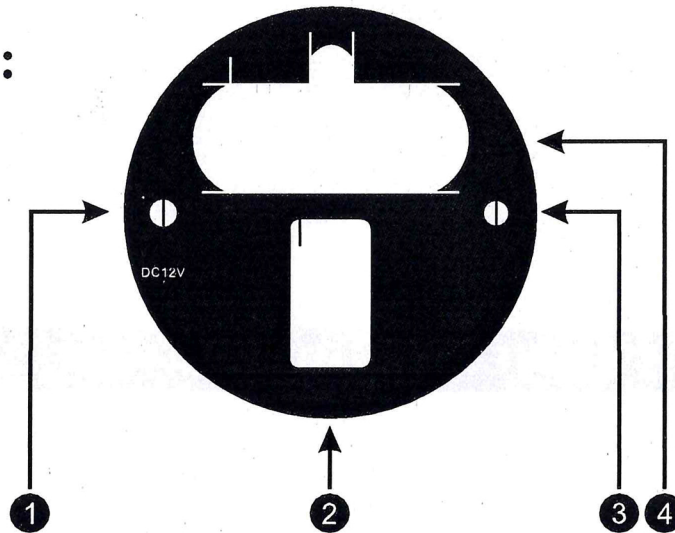

- 1.DC power supply DC12V/2A input interface
- 2.Microphone placement position
- 3.Microphone connection port
- 4.Battery placement box

If the power indicator light becomes dim or the sound significantly decreases, the battery should be replaced or charged in a timely manner. The charging time for this product is 8 hours.

This product is suitable for outdoor use, do not shout in the ear

## Technical specification

Max power	50W	Power supply	DC12V/2A
SNR	≤7%	Battery	DC11V/1500mA
Horn height	365mm	Effective distance	0.5-0.7KM
Horn caliber	230mm	Recording Time	16分钟
Net weight	1.66KG	.....	.....



## **HIGH POWER LOUDSPEAKER**