


User Guide

12V DC 10AMP SWITCH MODE UNINTERRUPTIBLE POWER SUPPLY

- Read carefully this user guide before activating and using.
- Use this equipment only for an indoor adapted application.
- Mounting, maintenance and repair must be carried on by a skilled and authorized staff.
- The activation is easy, but a correct handling and an appropriate maintenance are mandatory to keep the power supply working perfectly.

Mounting

The UPS must be mounted firmly and securely.

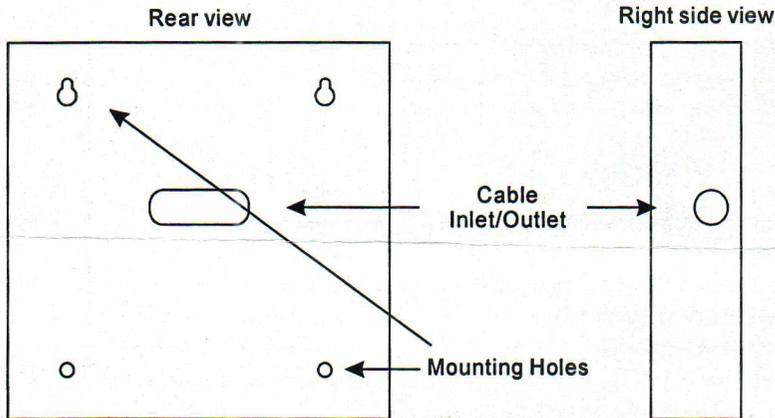


LED description

- ① Red Ⓞ AC POWER
- ② Green Ⓞ DC OUTPUT
- ③ Amber Ⓞ BATTERY CHARGE
- ④ Red Ⓞ BATTERY LOW VOLTAGE

Situation	① Red	② Green	③ Amber	④ Red
Battery in charging	on	on	flash	off
Battery in full charged	on	on	on	off
No AC, V-battery > 11±0.3V	off	on	on	off
No AC, 10±0.3V < V-battery < 11±0.3V	off	on	on	on
No AC, V-battery < 10±0.3V	off	off	off	off

Terminal description

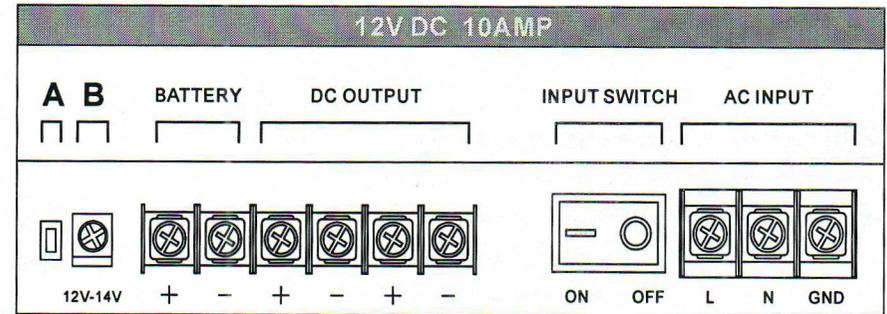

A: BATTERY ACTIVATION SWITCH

*Before connecting to AC power for the first time, this switch can be used for activating battery; After connecting to AC power, battery will be activated automatically in each AC power failure, without pushing this switch.

B: ADJUSTABLE OUTPUT VOLTAGE

*Based on the premise that the load can work normally, output voltage regulation is suggested between 13.8V to 14.0V. Battery can be fully charge and prolong the service life under this situation.

Main specification

AC supply: 190-240VAC 50/60Hz
 Output voltage --
 on mains power: 12.0V-14.0V DC adjustable
 on battery standby: 10.0V-12.5V DC
 Max. Output current: 10.0Amp
 Max. Charge current: 1.8Amp
 Recommended battery: 12V , 17Ah
 Operation temperature: -20~+45 Degree Celsius
 Humidity: Up to 90% non-Condensing

Protection

Over-voltage protection
 Over-current protection
 Short circuit protection
 Over charge protection
 Over discharge protection
 Self-recovery when fault condition remove

Caution

- Make sure the power supply input voltage and the local grid voltage matching before using.
- The UPS is to be installed in a controlled environment, make sure the power supply is well ventilated.
- It is mandatory to ground the power supply.
- Improper storage and installation environment may deteriorate insulation, shorten components life and cause malfunctions.



All content, specifications and availability subject to change without prior notice.